


SRF04 Timing Diagram

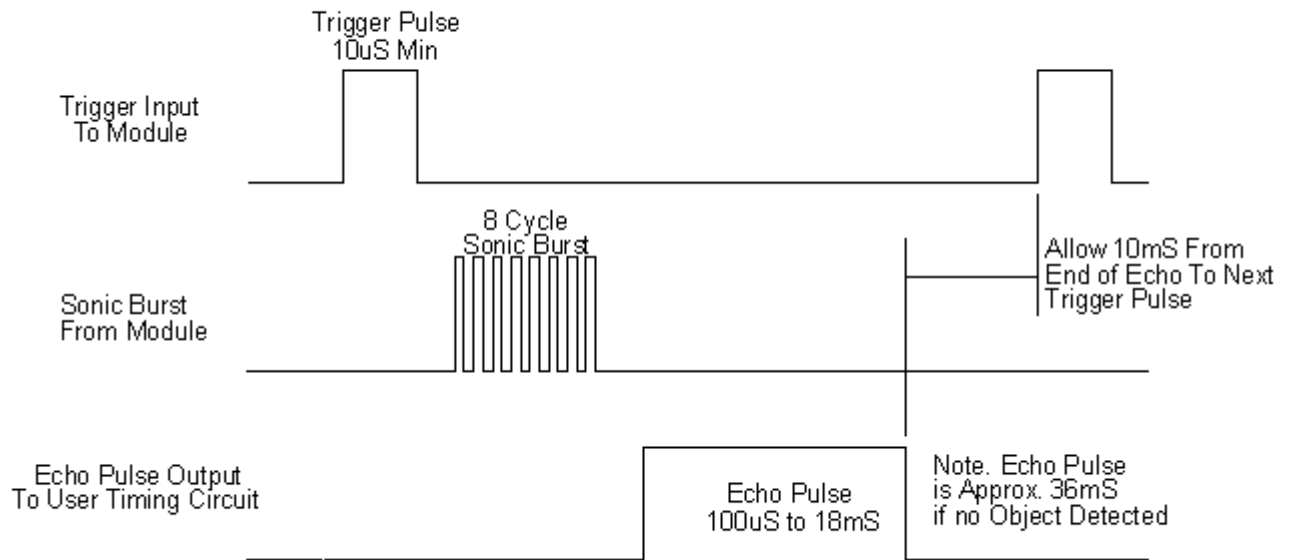

SRF04 Connections

- 5v Supply
- Echo Pulse Output
- Trigger Pulse Input
- Do Not Connect
- 0v Ground

